


# Installation of Sportpoint with floor

Installation of a Sportpoint circle with floor:

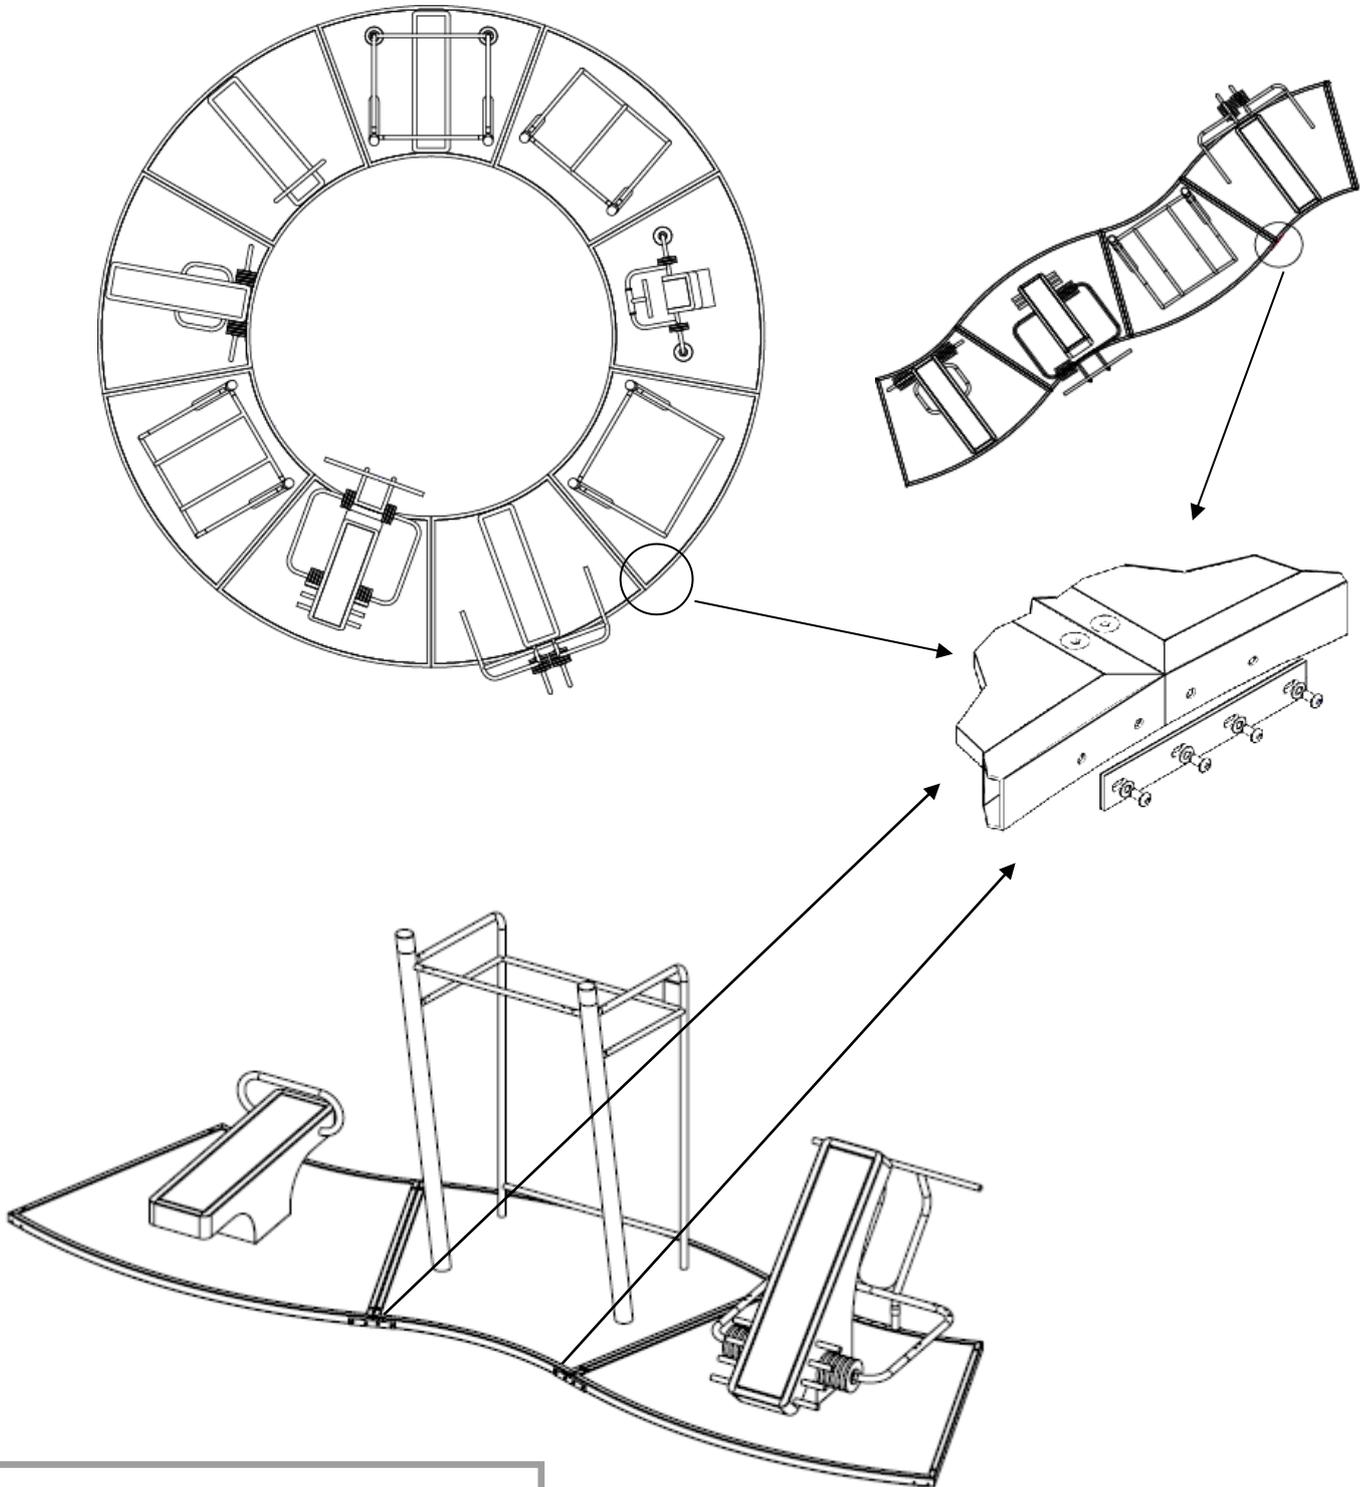


Connecting Sportpoint floors with provided connecting strips, washer and nut:




**When 3 or more floor parts are connected, anchoring in the ground is NOT necessary.**



Installing Sportpoint units on soft surface with provided anchor pins:

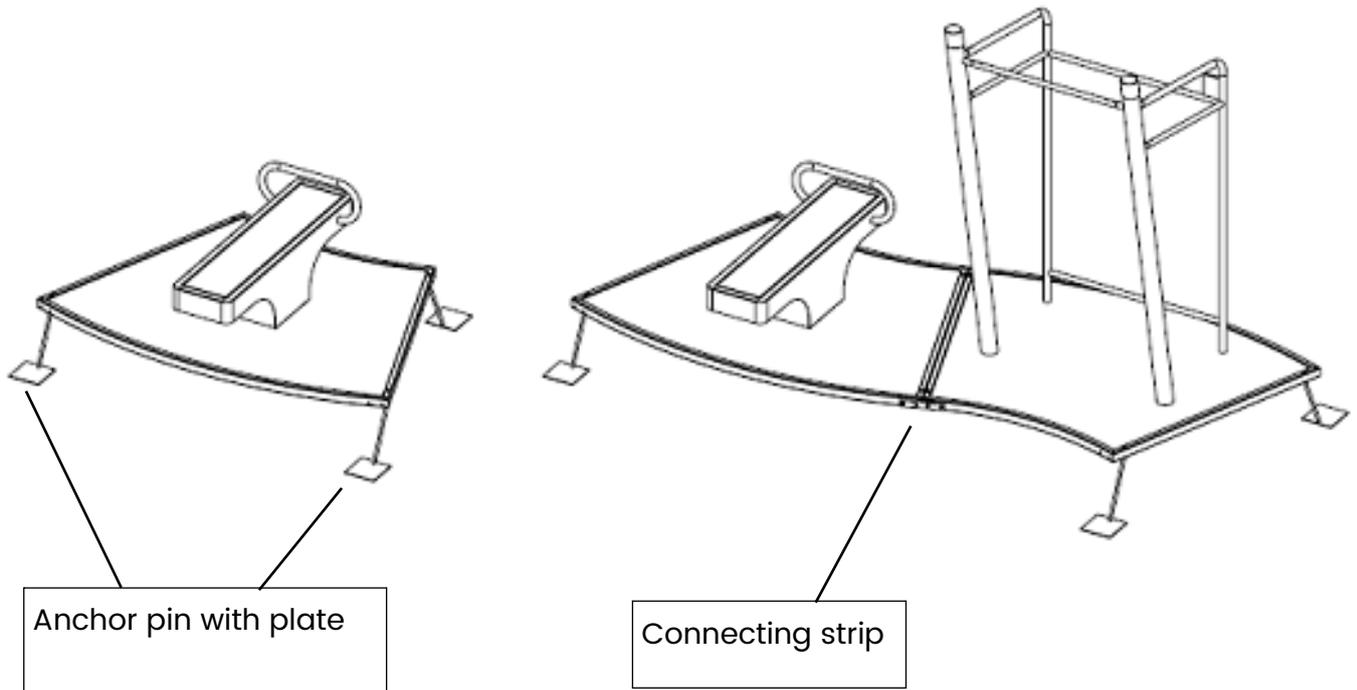

**When 3 or more floor parts are connected, anchoring in the ground (with anchor pin with plate) is NOT necessary.**

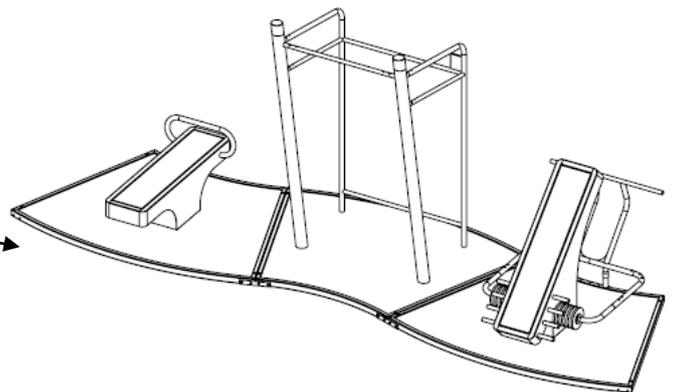

Dig holes with a depth of 390 mm:

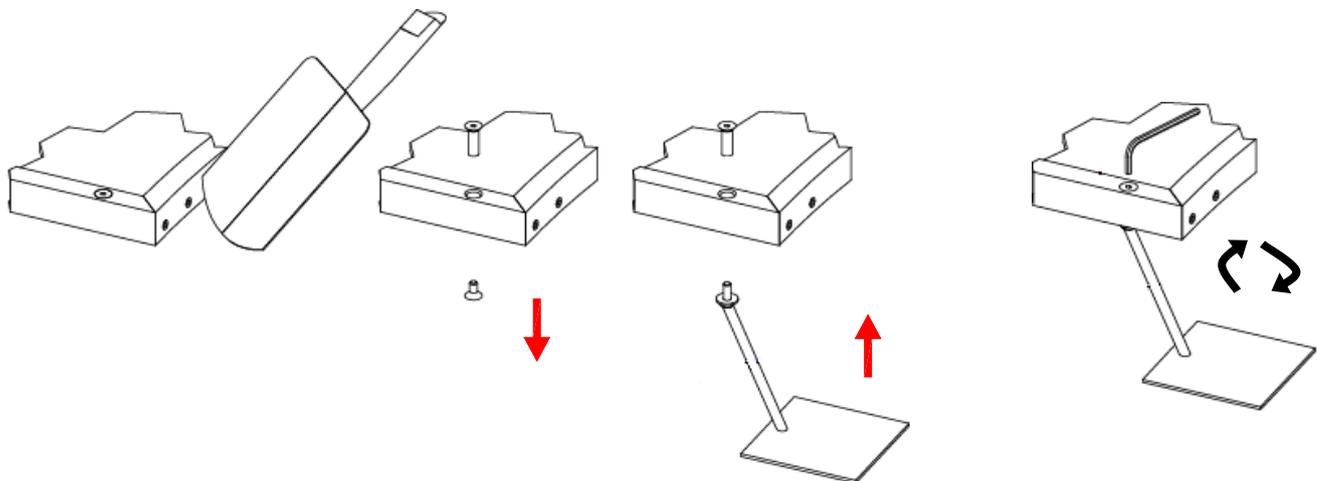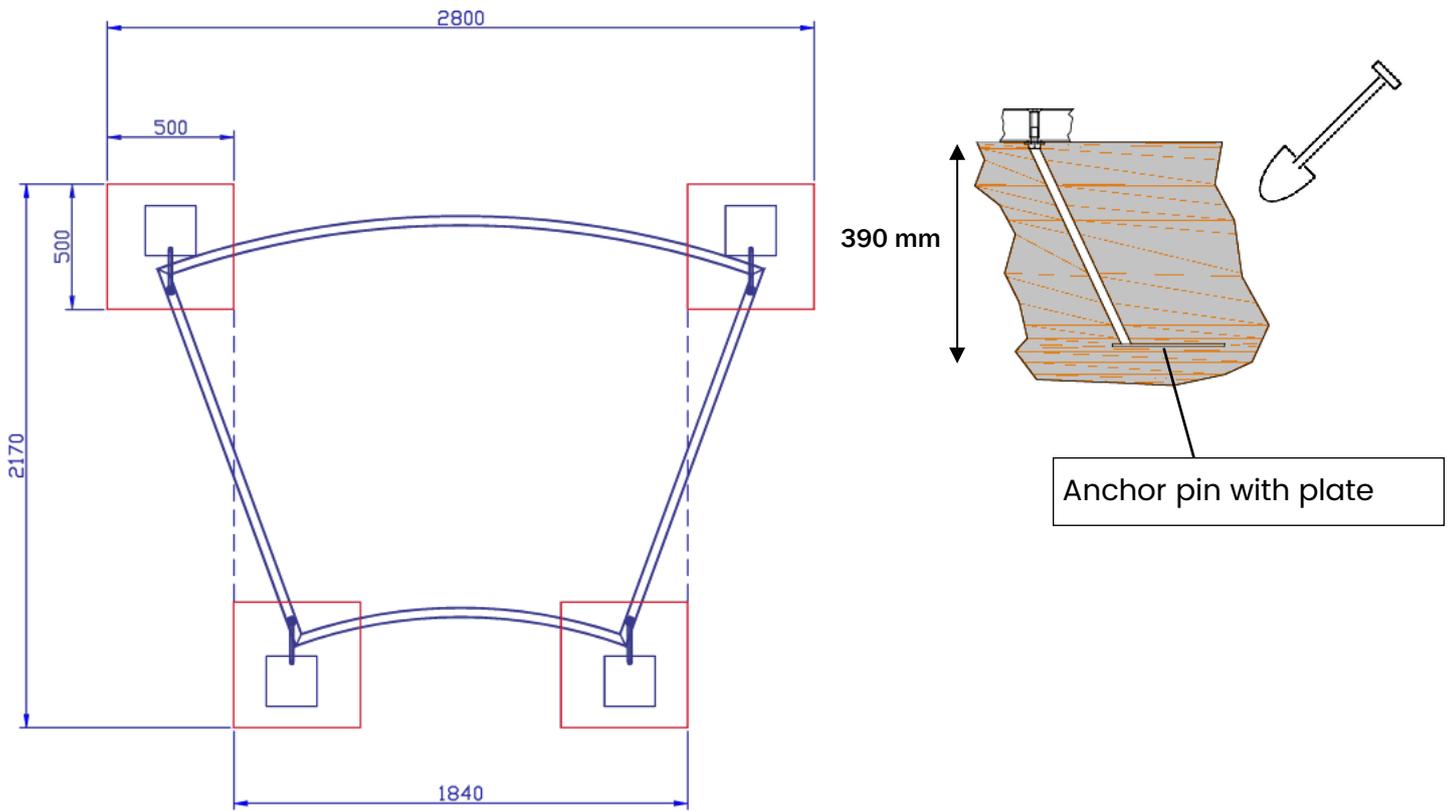


Attaching the anchor pin on each corner:




Cover the plates with the soil and close the holes.

Anchoring Sportpoint floors directly on concrete with wedge anchors:

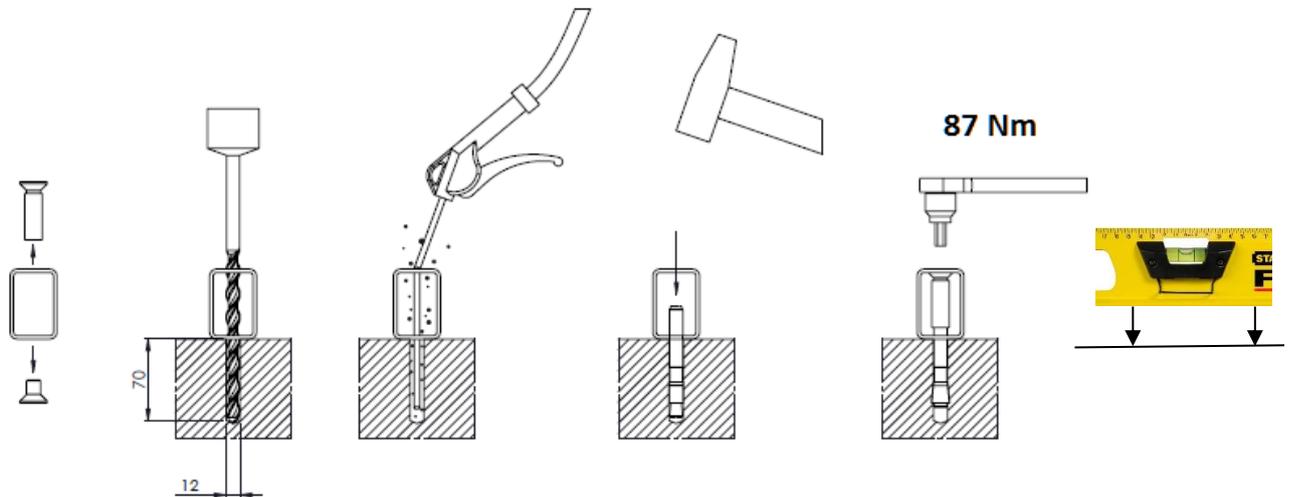

- 1 – Take out the socket screws.
- 2 – Drill holes through the opening in the floor.
- 3 – Clean the holes with air.
- 4 – Put the provided wedge anchors with internal thread M12 in the holes.
- 5 – Use the socket screw and fasten.

Anchoring Sportpoint floors directly on tarmac with **chemical anchoring**:

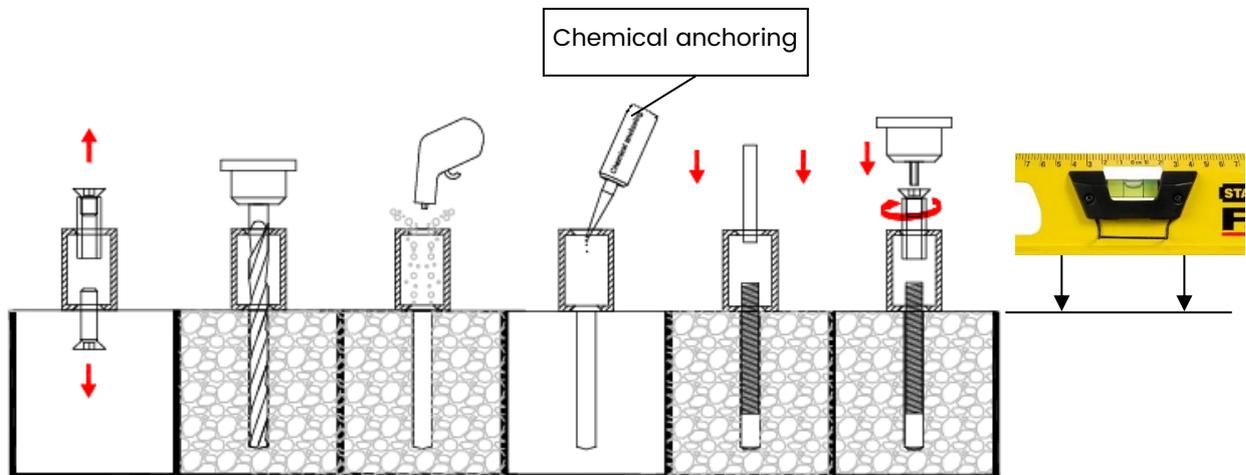

- 1 – Take out the socket screws.
- 2 – Drill holes through the opening in the floor.
- 3 – Clean the holes with air.
- 4 – Apply chemical anchoring (not provided)\*
- 5 – Put threaded rod (not provided) M12 in the holes.
- 6 – Use the socket screw and fasten.

\* Anchoring on tarmac with chemical anchoring and threaded rod (**NOT provided**). Use drill instructions from your chemical anchoring

**BEFORE APPLYING WET POUR OR ARTIFICIAL GRASS MAKE SURE THAT THE COMPLETE UNIT IS LEVEL, STABLE AND CORRECTLY INSTALLED!  
AND CHECK IF THE PRODUCT FUNCTIONS AS IT SHOULD.**

